

# Quick Start Guide

---

## DIGIVAC MODEL 100H

Battery Operated, Digital Vacuum Instrument

Specifications	
Power:	D Battery
Vac Interface:	1/8 inch MNPT
Sensor:	Hastings DV-6M
Range:	1-1999 microns
Units:	mTorr, $\mu$ Bar or Pa

1. Verify that you have received all components:
  - Controller with LCD display
  - Hastings DV-6M vacuum sensor
  - Cable that connects controller with the 531 sensor
2. Install a D battery (not included) into the controller, flip the switch, and verify that the display lights up.
3. Plumb the Hastings DV-6M sensor into your vacuum system, with the pipe threads facing down, and the octal pins facing up
4. Connect the Dsub end of the sensor cable to the controller, and the octal end to the DV-6M sensor.
5. Verify that the readings are appropriate.

For the full instruction manual, please go to: <http://www.digivac.com/manuals/100tc45.pdf>



### The DigiVac Company

105B Church Street  
Matawan, NJ 07747

Ph: 732.765.0900

Fax: 732.765.1800