

Quick Start Guide

DIGIVAC MODEL 22W Ultra Compact Vacuum Transmitter

Specifications	
Power:	100~240 VAC
Vac Interface:	1/8 inch MNPT
Sensor:	Varian 531
Range:	.001-760
Units:	Torr

1. Verify that you have received all components:
 - Controller with optional LCD display
 - Varian 531 vacuum sensor
 - Power Supply
 - Output Cable
2. Plumb the vacuum gauge tube in to your vessel.
3. Plug in the 22W on top of the gauge tube.
4. Run the AC Adapter wire provided to the gauge.
5. Verify that the readings are appropriate. For example, a chamber exposed to atmosphere might have a reading of 600-760 Torr.

For the full instruction manual, please go to: <http://www.digivac.com/manuals/200-200P-801.pdf>



The DigiVac Company

105B Church Street
Matawan, NJ 07747

Ph: 732.765.0900

Fax: 732.765.1800