



## **INSTRUCTION MANUAL**

Digivac Model 276

Digital Vacuum Gauge

Digivac Models  
Model 276

276 Ranges  
.001 to 760 Torr  
.001 to 1013 milliBar

**YOU MUST READ THIS MANUAL BEFORE USE**

The Digivac Company  
105B Church Street  
Matawan NJ 07747  
[www.digivac.com](http://www.digivac.com)  
(732) 765-0900  
(732) 765-1800 FAX

## **CONTENTS**

- 1.0 Description and Principle of Operation.
- 2.0 Construction.
- 3.0 Unpacking and Inspection.
- 4.0 Installation.
- 5.0 Operation.
- 6.0 Servicing and Calibration.
- 7.0 Notes on Calibration.
- 8.0 Understanding Microns, Torr, and Absolute Pressure.
- 9.0 Accessories and Modifications
- 10.0 Attachments and Illustrations.
- 11.0 Terms & Conditions

../instruct/276.3.doc 3/29/2011

## **1.0 DESCRIPTION AND PRINCIPLE OF OPERATION.**

The DIGIVAC Model 276 gauge is a compact digital vacuum sensing instrument. It uses a thermocouple gauge tube in combination with a piezoresistive transducer element to sense vacuum and display the reading in Torr. The Digivac Model 276 sits on a bench top and has 2 optional SPDT controls, analog output, RS232 data and Ethernet available. If in doubt about what gauge sensor you have, consult the Digivac packing list that came with your instrument for positive identification.

Consult the Digivac website [www.digivac.com](http://www.digivac.com) for information about other Digivac vacuum controllers and gauges.

The Digivac Model 276 thermocouple circuitry operates by measuring the temperature rise of an electrically heated thermocouple exposed to a vacuum. As vacuum increases, or, more correctly, as absolute pressure decreases, fewer and fewer molecules of gas are available to cool the thermocouple. With fewer molecules the air temperature rises and the thermocouple gauge thus senses the vacuum. A precision reference inside the Digivac in conjunction with an integrated circuit amplifier controls the electrical excitation of the sensor filament. Once the device rises above 5 Torr, the piezoresistive transducer takes over the readings.

## **2.0 CONSTRUCTION.**

The base model 276 consists of the indicating and controlling instrument, the sensing tube, the sensing tube cable and an AC power adapter.

The instrument is housed in a rugged vinyl clad metal enclosure. The gauge tube houses the various thermocouple sensing, heating and compensating elements, the transducer and terminates in an RJ45 connector. Regulating circuitry in the instrument provides constant current for gauge tube excitation, and thus compensates for resistance in the probe leads.

## **3.0 UNPACKING AND INSPECTION.**

After the DIGIVAC is received, it should be carefully unpacked and inspected for damage during shipment and for completeness. The package should contain, as a minimum, the instrument, the thermocouple gage tube, the tube connecting cable, and an instruction manual. In the event of a loss during shipment, a claim should immediately be made to the common carrier or the postal service, as applicable. The Digivac warranty pertains only to the instrument, and does not cover losses in shipping.

## **4.0 INSTALLATION.**

The instrument should be located in a clean, dry environment for best results. The unit can be placed on a desktop. The gauge tube cable should be identified by wire tags or markings specific to your environment.

Thermocouple gauge tubes must be installed in a thread-down orientation in a clean, dry vacuum system. While threading the gauge tube in to the manifold, the gauge tube cable should be disconnected to avoid damage. In this way, twisting of the cable and the octal socket on the tube is avoided. Care should be exercised to install the tubes in a dry part of the system. Since the instrument works on the principle of temperature rise, the probes will not work if they become filled with a liquid such as vacuum or diffusion pump oil. The gauge tube should be protected against oil and other contaminants by installing it in such a way to protect it. A good practice is to mount the gauge tube in the most vertically distant place from oil and other contaminants as applicable. The gauge tube should be mounted in the most stable pressure region of the vessel to be measured. For example, it would be better to install the gauge tube on a tank rather than on the pipe that is directly connected to a vacuum pump. In the event of contamination, see section 6.0 for gauge tube cleaning instructions.

If the gauge is used in a Neon sign processing facility, the following is recommended to protect the gauge from damage from bombarding:

- The gauge tube should be isolated from the system with a stopcock. The stopcock should be closed when bombarding.
- There should be at least 2 feet of tubing between the electrode and the Digivac. For best results, the tubing should be metal.
- In extreme cases, the gauge can be absolutely protected by installing a normally open solenoid valve between the gauge tube and the system. The solenoid valve coil should be in parallel with the bombarding transformer. In this way, the solenoid will be closed and the gauge tube will be positively protected whenever bombarding is done.
- If a gauge is damaged by bombarding, it can generally be brought back to operating condition by replacing the Op amp which controls the gauge tube current. Consult Digivac.

### **Set Point/2C Control:**

The set point connections are in the back of the unit. There are 2 rows of pins. The left row of pins is for set point 1, and the right row of pins is for set point 2. The top 3 pins are in the order from top to bottom:

1. N.O. – Normally open. This means that above the set point value there is no current path between the common and N.O. connection. Put another way the switch is “OFF” between these 2 terminals. When the vacuum indication goes below the set point value (higher vacuum, lower pressure) the current path closes. Put another way the switch is “ON” between the N.C. and N.O. connections at absolute vacuum readings below the set point value.
2. N.C. – Normally closed. This means that above the set point value there is a current path between the common and the N.C. terminal. Put another way the switch is “ON” between these 2 terminals. At the set point value and below (higher vacuum, lower pressure) the connection is open. Put another way, the switch is “OFF” between the common and the N.C. connection at higher vacuum (a lower vacuum reading).
3. common – The common line of a switch

To adjust the control set points of the **Model 276**, carefully remove the display lens. On the left of the instrument are two potentiometers and a three position jumper strip. The jumper strip has a shorting bar attached to it. When this bar is removed, the unit displays indicated vacuum. When placed so as to short out the left two pins, the unit will display the #1 set point. When placed on the right, it displays #2. Place the jumper for the desired set point, and adjust the potentiometer. The set points have a settable range from .001 Torr to 5.0 Torr. If you would like to disable the set points, set the set point to zero.

Take care in insuring that the wire connections are made fast, and the voltage and current does not exceed 250V or 7A. If you need to control a device that draws more power, consider another relay in between the Digivac output and the device to be controlled

The Analog output is located in the center of the back panel, and should be connected to a high impedance input. The output impedance is 1K $\Omega$ .

The RS232 connection can be made to a PLC or computer via a male DB9 cable connection to the female DB9 connection on the Digivac. The Digivac acts as a DCE, so a straight serial connection is appropriate.

Please use the supplied 5V AC adapter with your Instrument. This adapter provides clean short protected power to protect and insure accuracy of the internal circuitry.

## 5.0 OPERATION.

After installation, the DIGIVAC is ready for immediate operation. The unit will normally provide accurate readings immediately, however occasionally a gauge tube will have absorbed material during storage and may require as much as 24 hours of operation before accurate readings are attained. It is recommended that the DIGIVAC be energized continuously during vacuum system operation so that the hot filament will not allow contaminants to condense.

In cases where the system has contaminants, as is often the case with metalizing and coating equipment, it is often effective to isolate the gauge tube with a solenoid or manual valve during periods when contamination is most active.



## 6.0 SERVICING - GAUGE TUBE CLEANING.

In many cases, a gauge tube may become fouled with oil or other foreign matter. It is often possible to restore the functionality of contaminated probes with cleaning. If the contaminant is known, the tube should be filled with a fluid that is known to be a solvent to that contaminant. As an example, ether is often effective in removing residues of some oils. Commercial carburetor cleaners are very powerful solvents and are highly effective against some contaminants.

After cleaning with solvents, the gauge tube should be completely dried or flushed with a volatile solvent to assure that it is dry prior to re-installing it. If this is not done, contamination of the system may result.

### 6.1 FACTORY REPAIR AND CALIBRATION.

The vacuum gauge assembly is designed to provide years of trouble-free service, and the liberal internal use of plug-in components make it easily repairable. No field servicing of the unit is recommended other than replacement of the gauge tube if onsite calibration facilities and knowhow exist, but factory servicing and calibration are available at a nominal cost and turn-around times of 24 hours are typical.

### 6.2 FIELD CALIBRATION.


Each Digivac vacuum gauge controller is calibrated to the particular vacuum gauge sensor that is shipped with the unit. While changing the sensor is possible, it will result in a slightly different reading as all gauge tubes are not created equal. Although it is preferable that all calibration be performed at Digivac, field calibration can be accomplished.

Before re-calibrating the instrument, it should be ascertained that the instrument is in fact incorrect. In many cases, the problem will be with a tube that is fouled, or a system that is operating improperly. It is recommended that a spare tube be kept on hand and stored in a clean, dry place. Then, in cases of suspect readings, the tube should be changed before proceeding further.

If adjustments are to be made, proceed as follows:

- A) Ascertain if you have the "button" calibration or the "no button Calibration" scheme. Unless otherwise noted on the packing slip, it is likely that you have the "button" calibration scheme.
- B) Remove the Instrument from the panel.
- C) Remove the front panel cover of the instrument and locate the two thermocouple calibration potentiometers. These 2 Potentiometers have either "ATM" or "Vac" etched into the circuit board to the right of the display. Also locate the transducer span potentiometer which is a taller potentiometer to the left of the display
- D) Pre-Calibrate
  - a. With instrument at atmospheric pressure and tube installed, adjust the "ATM" test point so the voltmeter indicates 0.445 VDC.
  - b. With the instrument still at atmospheric pressure and tube installed, adjust the "Vac" so the voltmeter indicates 0.154 VDC.
- E) Operate the vacuum system at the lowest attainable pressure, and allow the system and the gauge tube to stabilize for several minutes. Factory zero setting is done at a pressure of .1 milliTorr (.1 microns) or less.
- F) Adjust the zero setting potentiometer so the unit reads zero. Make sure not to under span. Allow the measurement standard to rise to 1 milliTorr and make sure the gauge reading also reads 1 milliTorr.
- G) Check the operation of the gauge at other pressures below 1 Torr. Normally, adjustment of the zero will not be interactive with the readings of the instrument at higher pressures.
- H) Note the Transition Region.
  - a. For button calibration models: The transition region is between 3 and 8 Torr. When the pressure is rising from 1 milliTorr to 3 milliTorr, the unit is indicating vacuum based on the thermocouple sensor. From 3 to 8 milliTorr the unit is indicating vacuum based on a percentage blend between the thermocouple sensor and the transducer. At a measurement above 8 milliTorr, the unit is basing the vacuum level indication solely on the transducer data. Note that the Thermocouple determines what region the unit is in.
    - i. Set the vacuum level so the 276 indicates 7 Torr
    - ii. Adjust the "ATM" potentiometer while holding the button down so the 276 reads what the standard reads, being careful that the 276 not go over 7.5.
    - iii. If the unit goes over 7.5, bring the vacuum level so the 276 reads less than 2 Torr, and then go back to step i.
    - iv. Repeat steps i-iii until the 276 matches the standard at 7 Torr within .5 Torr.

- b. For “no button” calibration models, the 276 is in the transition region from 5 Torr to 5.5 Torr. When the pressure is rising from 1 Torr through 5.5 Torr, the reading is being taken from the Thermocouple. At 5.5 Torr, the vacuum reading is being taken from the transducer.

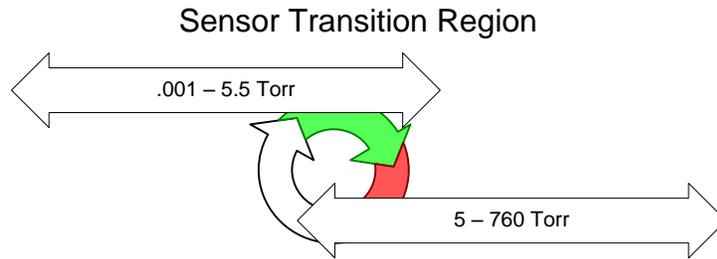

Similarly as the pressure level is decreased from 760 Torr to 5 Torr, the vacuum reading is taken from the transducer. At 5 Torr, the vacuum reading transitions to being taken from the Thermocouple.

- i. Set the vacuum level so the standard reads 35 Torr.
  - ii. Set the Transducer potentiometer so that the 276 reads the same as the standard at 35 Torr.
  - iii. Slowly raise the vacuum level to below 2 Torr, then to approximately 4.5 Torr, making sure not to let the 276 go over 5 Torr, and adjust “atm” potentiometer so unit matches the standard.
  - iv. Repeat D-G until no calibration is necessary with an accuracy of within 1 milliTorr near zero, and within 1 Torr near 5 Torr.
- l) Bring the vacuum level to atmosphere (760Torr) and check that the 276 reading agrees to within 10 Torr.

## 7.0 NOTES ON CALIBRATION.

The DIGIVAC is calibrated in nitrogen, which has thermal properties virtually identical to air. Other gasses will affect the readings by an amount proportional to the thermal conductivity of the gases. In most cases, the gases present in a vacuum system will be air, nitrogen, or oxygen, and no appreciable errors will occur.

Certain other gases, however, have thermal conductivity significantly greater than air and will cause the instrument to read higher than the actual amount of pressure. Examples of such gasses are water vapor, fluorocarbon refrigerants, and acetone. Conversely, other gasses have thermal conductivity significantly lower than air and will cause the instrument to read lower than actual pressure. Examples of such gasses include helium, oxygen and to a lesser extent, CO<sub>2</sub>.

When interpreting readings using gasses other than air, it should be borne in mind that the DIGIVAC reads Torr, which is a measure of absolute pressure - that is the opposite of vacuum. Thus, a lower numerical reading actually is a higher level of vacuum. For more information, refer to section 8.0.

When in doubt, consult Digivac.

## 8.0 UNDERSTANDING TORR.

The DIGIVAC and many similar instruments are calibrated in microns or "milliTorr." It is appropriate to discuss what microns are and to relate microns to other measures of pressure and vacuum.

Microns are not really a measure of vacuum at all, but rather of absolute pressure. It will be recalled that the pressure of the atmosphere is 14.696 or approximately 14.7 pounds per square inch at sea level. This pressure is due to the weight of all of the air in the earth's atmosphere above any particular square inch. This 14.696 psi is equivalent to the pressure produced by a mercury column of approximately 29.92 inches high or .76 meters (about 3/4 of a yard) or 760 millimeters of mercury. Atmospheric pressure varies greatly with altitude. It decreases approximately 1 inch of mercury per thousand feet of altitude. It also varies widely with local weather conditions. (Variations of one half inch in a single day are common.) The word vacuum means pressure lower than atmospheric or "suction," but, in describing negative pressure, the atmosphere is only a satisfactory reference if we are dealing with values of vacuum down to about 27 inches of mercury. Below that, it is much more useful to talk in terms of absolute pressure, starting from absolute zero. The DIGIVAC and all similar instruments do just this.

One TORR, a commonly used unit, is an absolute pressure of one millimeter of mercury. A milliTorr is equal to one thousandth of a TORR. A MICRON is the same as a milliTorr. The full scale reading of a DIGIVAC is 1999 microns and is equivalent to 1.999 TORR of approximately 2/760 of atmospheric pressure. This is less than .1 inches of mercury, and less than .05 PSI.


## **9.0 ACCESSORIES AND MODIFICATIONS.**

The following are offered as accessory equipment or field-installed modifications.

Padded shoulder strap Case with Velcro closure- For instruments that will be used in the field, particularly in cryogenic applications, a padded shoulder strap case is available. This gauge is also available with Ethernet, controls and software to remotely monitor and graph the vacuum level. Feel free to browse at [www.digivac.com](http://www.digivac.com).

Below is the typical response of a thermocouple vacuum gauge tube.  
 Digivac gauges which use pressure transducers are linear.

Milli-Torr	Milli-volts
0	10
5	9.57
10	9.32
20	8.81
25	8.54
35	8.11
50	7.46
75	6.63
100	5.96
150	5.04
200	4.38
300	3.56
500	2.72
750	2.24
1000	1.97
1500	1.71
1900	1.59

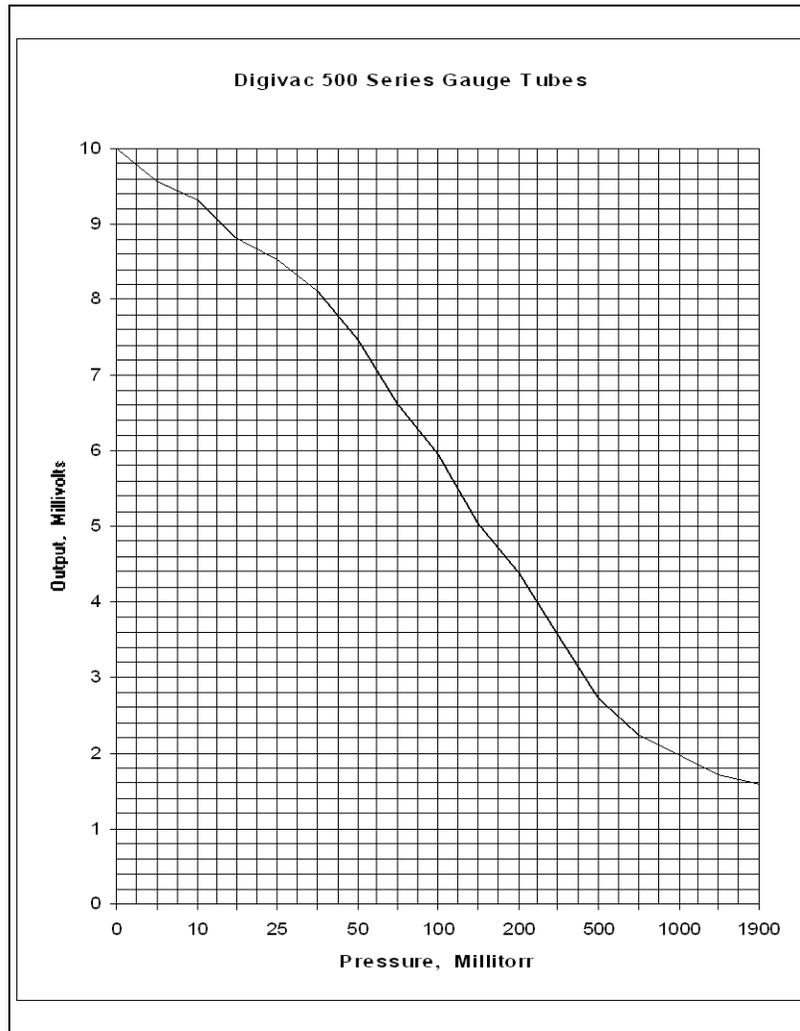

## 11.0 TERMS AND CONDITIONS

### TERMS OF USE, LIMITED WARRANTY & LIABILITY WAIVER

THE DIGIVAC COMPANY (“DigiVac”) offers all of its products with the following terms and conditions and notices as follows. By accepting and/or using a DigiVac product, you hereby acknowledge and agree to the following terms and conditions, and acceptance of these terms and conditions are a condition precedent to any purchase/sale agreement between you and DigiVac.

**EXCLUSIVE OBLIGATION:** The DigiVac product you are purchasing has been designed for a specific use within a set of suitable operating conditions, as set forth in its User Manual, or as indicated otherwise by DigiVac. Any use of the DigiVac Product for any purpose or under any conditions, other than those specified, shall render any limited warranty void, and shall expressly invalidate any liability of DigiVac for damages as a result of such misuse.

**USER LIMITATION:** You may not modify, copy, distribute, transmit, display, perform, reproduce, publish, license, create derivative works from, transfer, or sell, any information, software, products or services obtained from or created by DigiVac to any third party, without the express written consent of DigiVac to do otherwise. Any violation of this provision shall give rise to an indemnification of DigiVac by you, for any third party claims arising out of such violation.

**THIRTY (30) DAY LIMITED WARRANTY:** All DigiVac products are warranted against any manufactured defect for a period of thirty (30) days from date of purchase, unless such product is a custom-work for you and not a standard DigiVac product. Any product qualifying as a custom-work shall not be warranted against any defects for any purpose, and your acceptance of such custom-work shall relieve DigiVac of any liability for any purpose. WITH THE EXCEPTION OF THE LIMITED WARRANTY ABOVE, YOU AGREE ANY DIGIVAC PRODUCT IS PROVIDED AS IS, EXCLUSIVE OF ANY WARRANTY, INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, NON-INFRINGEMENT, OR ANY OTHER WARRANTY, EXPRESSED OR IMPLIED.

**LIMITATION OF LIABILITY:** You agree and acknowledge, DigiVac shall have no liability to you whatsoever for any direct, indirect, punitive, incidental, special consequential damages arising out of or connected with the use or misuse of its products. In particular, given the nature of DigiVac products, you agree and acknowledge, under no circumstances whatsoever shall DigiVac be liable to you for any consequential damages for damage to any non-DigiVac product or service, arising from the failure, use or misuse of a DigiVac product, including, but not limited to, any vacuum system, engine, vehicle, factory, or the like. In the event, a court of law with proper jurisdiction finds DigiVac liable to you for any purpose, you agree and acknowledge DigiVac’s maximum liability shall not exceed the purchase price of one unit of product giving rise to such liability, or \$250.00, whichever is greater.

**ENTIRE OBLIGATION:** These terms and conditions express the entire obligation of DigiVac with respect to its products. If any part of these terms and conditions are deemed void, invalid, unenforceable or illegal, including, but not limited to, the warranty disclaimers, liability disclaimers and liability limitations set forth above, then the unenforceable clause or sentence may be disregarded with the remainder of these terms and conditions valid and enforced. In the event the unenforceable clause or sentence leaves a void in these terms and conditions, a provision closely matching the intent of the unenforceable provision should be deemed inherent within these terms and conditions, slightly modified to render such provision valid and enforceable.

**GENERAL:** These terms and conditions are governed by the laws of the State of New Jersey, USA. You hereby consent to the exclusive jurisdiction and venue of the Courts of New Jersey, in all disputes arising out of or relating to the use of this product. Use of this product is unauthorized in any jurisdiction that does not give effect to all provisions of these terms and conditions.

**MODIFICATION OF TERMS AND CONDITIONS:** DigiVac reserves the right to change the terms, conditions, and notices under which their products are offered.